

TECHNICAL DATA SHEET

GRAPHIC BLADE NO. 629




GRAPHIC BLADE NO. 629 from MARTOR is a high-quality blade made of steel. It is very sharp and has one usable cutting edge. Rounded tips increase user safety. The blade is 34.4 mm long, 5.7 mm wide and 0.50 mm thick.

GRAPHIC BLADE NO. 629 is available under order number 629.50 in a magazine of 10.

PRODUCT DETAILS

Order No.	NO. 629.50
Blade size (L x W)	34.4 x 5.7 mm
Material thickness	0.50 mm
Weight Blade	0.5 g
Basic material	Steel
Ground	2-sided ground-edge
Blade facets	Double bevel edge-ground
Safety feature	rounded blade tip
Blade characteristics	1-cutting edge blade

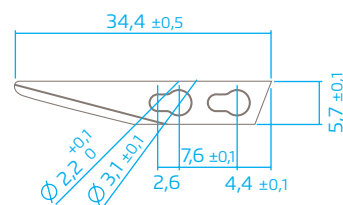

PACKAGING DETAILS

Packaging unit (PU)	10 in magazine
Size PU	66 x 25 x 18 mm
Weight PU	16.7 g
EAN Code PU	4002632908613
Quantity in outer pack	10 magazines
Size outer pack	188 x 69 x 28 mm
Weight outer pack	190 g
EAN Code outer pack	4002632959936
Customs tariff number	82141000



PRODUCT FEATURES

Technical features



Rounded-tip scalpel blade




2-sided ground-edge



Rounded-tip scalpel blade



2-sided ground-edge

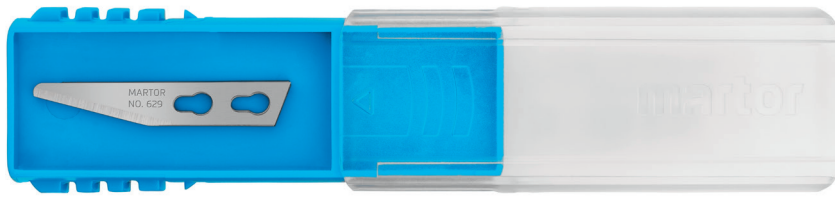

MOUNTABLE IN

The blade can be used in the following MARTOR knives: GRAFIX 501, TRIMMEX CUTTOGRAF, TRIMMEX SIMPLASTO.

SAFETY ADVICE



CAUTION: The blade is sharp and can result in serious and deep cuts. Therefore, never reach into the blade!

Only use cutting tools that are in perfect condition with sharp, clean and undamaged MARTOR blades. Also make sure that the knife's operation is not impaired by the material to be cut or by dirt or particle deposits around the blade.

1. Replacement of spare parts: Replace any blades that become dull at the right time! Dispose of old blades in a proper fashion. They should not be placed in a waste paper bin, as this poses a considerable danger of injuries.

2. Non-use of the knife: Always secure the blade in such a way (depending on product type) that injuries due to cuts are excluded. Store the knife in a secure place.

3. Care instructions: To guarantee a long service life, always keep the knife clean and do not expose it to unnecessary soiling and humidity.

CAUTION: No liability will be assumed for consequential losses. Subject to technical changes and errors! This knife does not belong in the hands of children!

CONTACT

MARTOR KG | Lindgesfeld 28 | 42653 Solingen | Germany
T +49 212 73870-0 | info@martor.de | www.martor.com